

# SUBARU®

INSTALLATION  
INSTRUCTIONS

REMOTE KEYLESS  
ENTRY SYSTEM  
IMPREZA  
P/N: H7110SS000

This device complies with FCC rules part 15. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference that may cause undesired operation.

### **Kit Contents:**

- Key Less Entry Control Module with Integral Bracket ...X 1
- Remote Control Transmitters ...X 2
- Installation Manual ...X 1

### **Preparation Tools:**

- Phillips Head Screwdriver (+)
- Ratchet Wrench with 10mm Socket
- Torque Wrench

## A. Installation

### **Meaning of Characters:**



: Remove

T : Tightening Torque



: Install



: Disconnect



: Connect




: Location of Clip or Screw


Y0001

Courtesy: SubaruParts.com Toll-Free 877-473-6200


1.

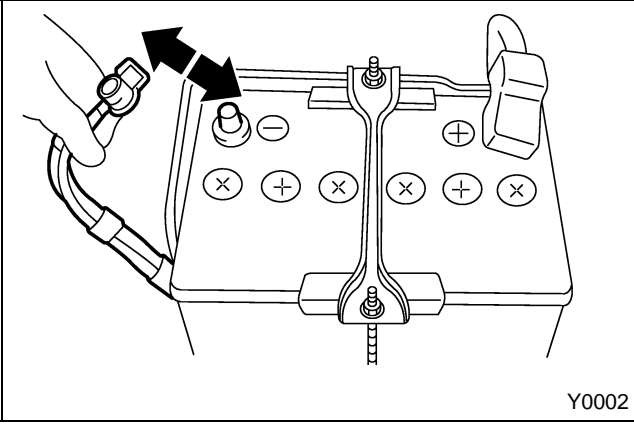


2.

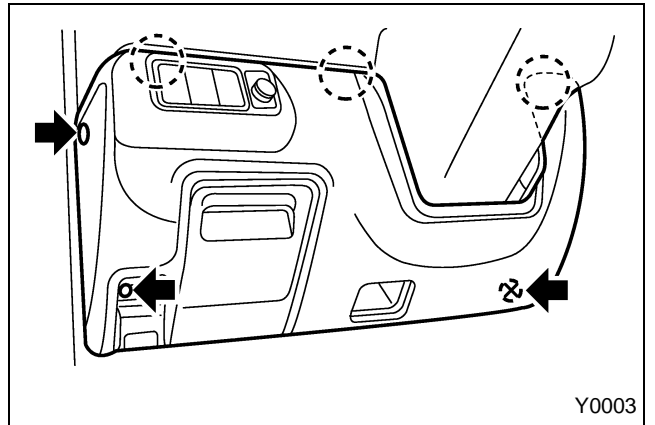


3.

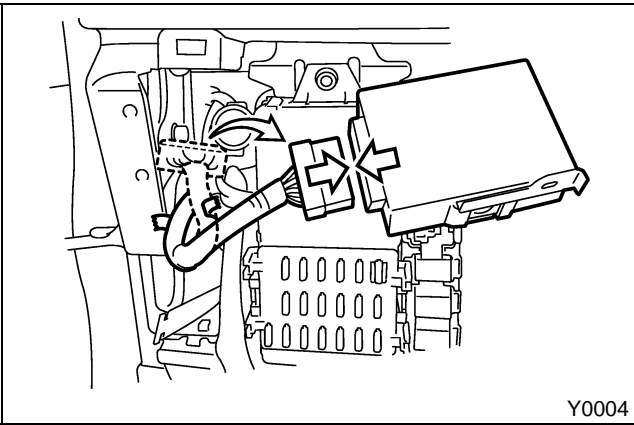


4.

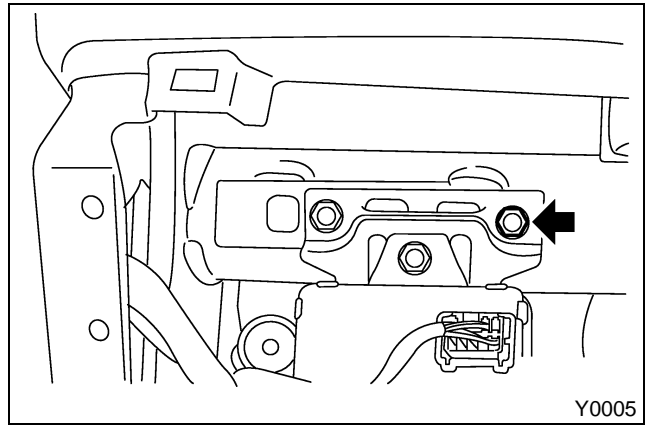


5.

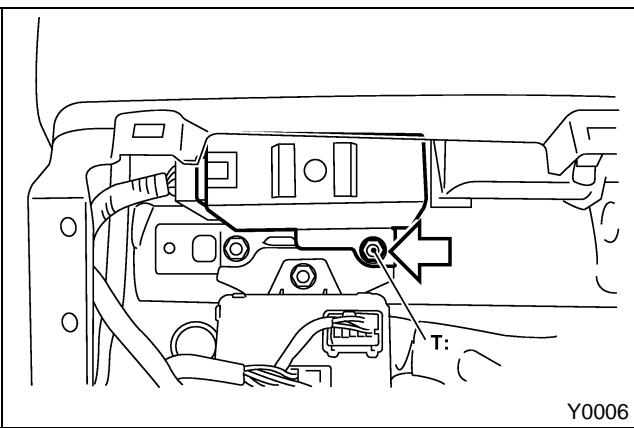

6.

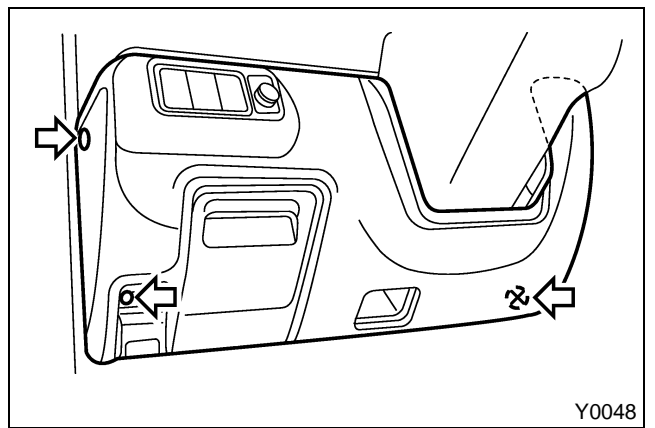

7.

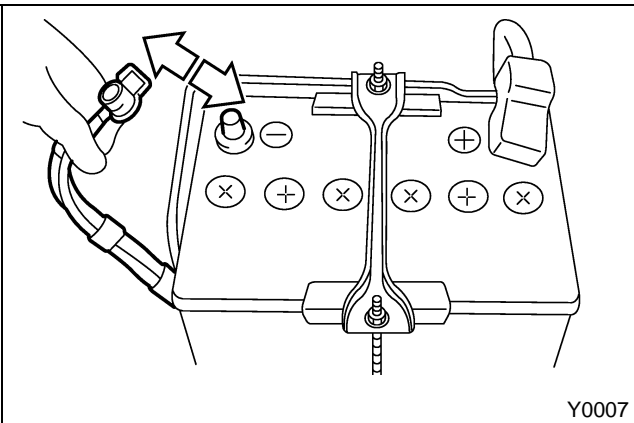

Courtesy: SubaruParts.com Toll-Free 877-473-6200

## B. System Test

1. Close all vehicle doors and rear gate (wagon) (with dome light switch set to “Doors”).
2. Depress the LOCK/ARM button on the remote and the following should be observed:
  - 2.1 All vehicle doors and rear gate (wagon) will lock.
  - 2.2 The vehicle courtesy (dome) light will turn off.
  - 2.3 The horn will chirp once.
3. Depress the UNLOCK/DISARM button on the remote and the following should be observed:
  - 3.1 The driver’s door will unlock.
  - 3.2 The vehicle courtesy (dome) light will turn on (for a maximum of 30 seconds unless a door is open and/or the ignition key is turned on).
  - 3.3 The horn will chirp twice.
4. Depress the UNLOCK/DISARM button a second time and the remaining doors should unlock.
5. Depress and hold the LOCK/ARM button (panic mode) for more than 2 seconds and the following should be observed:
  - 5.1 The horn will sound (for a maximum of 30 seconds or until a button on the remote is depressed).
6. Depress any button on the remote and the horn should stop sounding.
7. Depress the UNLOCK/DISARM button.
8. Simultaneously depress and hold the LOCK/ARM and UNLOCK/DISARM buttons for more than 2 seconds and the following should be observed:
  - 8.1 The horn will chirp 2 times indicating that the audible verification has been turned off.
9. Depress the LOCK/ARM button on the remote and the following should be observed:
  - 9.1 All vehicle doors and rear gate (wagon) will lock.
  - 9.2 The vehicle courtesy (dome) light will turn off.
  - 9.3 NO HORN SHOULD BE HEARD.
10. Depress the UNLOCK/DISARM button on the remote and the following should be observed:
  - 10.1 The driver’s door will unlock.
  - 10.2 The vehicle courtesy (dome) light will turn on (for a maximum of 30 seconds unless a door is opened and/or the ignition key is turned on).
  - 10.3 NO HORN SHOULD BE HEARD.
11. Simultaneously depress and hold the LOCK/ARM and UNLOCK/DISARM buttons for more than 2 seconds and the following should be observed:
  - 11.1 The horn will chirp 1 time indicating that the audible verification has been turned on.
12. Repeat steps 2 and 3 to ensure that audible mode is once again functioning.
13. Repeat steps 1 through 6 with the second remote transmitter.

## C. Notes on System Operation

1. The panic mode will remain active for 30 seconds unless another button on the remote is activated to cancel the mode.
2. If any secured opening (except the trunk) is open at the time of depressing LOCK/ARM on the remote transmitter, the horn will chirp 3 times indicating that all openings have not been properly closed. Upon closing, all doors and rear gate (wagon) will lock automatically.
3. Audible "ON" and "OFF" cannot be toggled unless the driver's door is unlocked.

**Installation is now complete.**